



Original	Replacement		
	Power		Power
	ambilight		Setup / OPT /
	Menu		Menu / Home
	Search		Sound / Title
	Sources		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	←		Back / Return
	Home		Shift + Menu /
	+		Display / Media
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold

Original	Replacement		
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Exit/Tv		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Windows		Smart / List
	You Tube		Shift + Yellow / YouTube /
	1		1
	2		2



