




 





















 

 





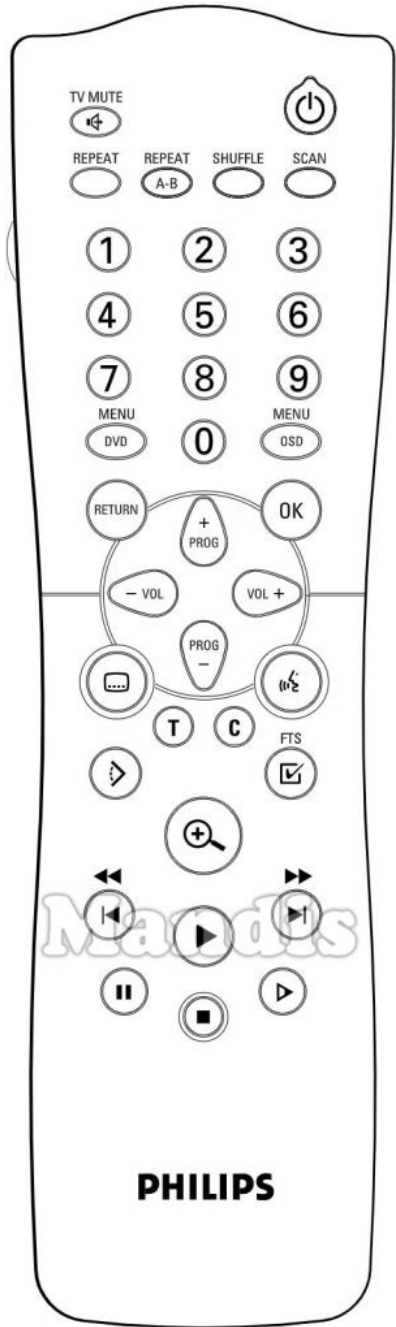


Original	Replacement
 Power	 Power
 Repeat	 Text
 A-B Repeat	 Options
 Shuffle	 AV
 Scan	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 DVD Menu	 D. Menu
 0	 0
 OSD Menu	 Menu

Original	Replacement
 Return	 Back
 Up	 Up
 P+	 Ch +
 OK	 Ok
 Left	 Left
 Vol-	 Vol -
 Right	 Right
 Vol+	 Vol +
 [...]	 Subt
 Down	 Down
 P-	 Ch -
 Audio	 Dual
 T-C	 TV/R
 Angle	 Format
 Zoom	 Eject
 <<	 <<
 I<	 I<<







	Original	Replacement		Original	Replacement
	Power		Power		Power
	1		1		1
	2		2		2
	3		3		3
	4		4		4
	5		5		5
	6		6		6
	7		7		7
	8		8		8
	9		9		9
	0		0		0
	Up		Up		Up
	OK		Ok		Ok
	Vol -		Vol -		Vol -
	Left		Left		Left
	Vol +		Vol +		Vol +
	Right		Right		Right

	Original	Replacement		Original	Replacement
	Down		Down		Down
	I<<		I<<		I<<
	I<<		<<		<<
	>>I		>>I		>>I
	>>I		>>		>>
	Stop		Stop		Stop

