 







 









 

 



 

 




 





Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Fav / Marker / PC
	 Smart / List
	 D.Menu / Top
	 Guide / EPG / -/--
	 Picture / Format
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Exit / Cancel / Clear
	 Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Up
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Menu / Home
	 Vol+
	 Shift + Red / Netflix /
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	CH-	CH- / Page-		
	1	1		
	2	2		
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	Subtitle	SUBTITLE / EQ		
	0	0		
	Text	TEXT / Goto		

