

 

 

 



 

 

 
 
 

 



 



 



Original	Replacement
	Power
	Source
	+  Shift + 8
	TV/DVD
	Eject / Surround
	+  Shift + Setup / OPT / Tools
	Select
	Exit / Cancel / Clear
	Repeat
	D.Menu / Top
	Setup / OPT /
	Up
	Left
	+  Shift + OK
	Right
	Down
	Back / Return

Original	Replacement
	Display / Media
	<< / Tune-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	I< / Preset-
	>I / Preset+
	Rec / Rec Mode
	Stop / Hold
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	0
	3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	2		2				
	Audio		Audio / Lang I/II				
	Rec Mode		Shift + Rec / Rec Mode				
	Timer		Sleep / Timer				
	Edit		Zoom / Size				
	Showview		Smart / List				

