





 



 



 

 



 










 

 



 

 

 



 









Original		Replacement		Original		Replacement	
	Power		Power		Treble-		CH- / Page-
	Mute		Mute / Dimmer		Coax		1
	Play/Pause		Play / Slow		Optical		2
	I<		I<< / Preset-		Audio In		Smart / List
	>I		>>I / Preset+		Aux		7
	Movie		Picture / Format		USB		8
	Night		Sleep / Timer		Bluetooth		9
	HDMI ARC		Setup / OPT /		DIM	 + 	Shift + Mute / Dimmer
	Voice		Sound / Title				
	Music		Audio / Lang I/II				
	Bass+		Up				
	Audio Sync -		Left				
	Audio Sync +		Right				
	Bass-		Down				
	Vol+		Vol+				
	Treble+		CH+ / Page+				
	Vol-		Vol-				

