 





 

 





 







 







 

 

 









 

 











 

 



 







Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround





Original		Replacement	
	Rec		Rec / Rec Mode
	Text		Text / Goto
	<<		<< / Tune-
	>>/Reveal		>> / Tune+
	I<</Hold		I<< / Preset-
	>>I/Sub.P		>>I / Preset+
	SUB.T		Subtitle / EQ
	Index/Title	+	Shift + Sound / Title
	Size/Zoom		Zoom / Size
	D.Menu		D.Menu / Top
	EPG		Guide / EPG / -/--
	FAV/Prog		Fav / Marker / PC
	P.Mode/Lang		Picture / Format
	S.Mode/Search		Sound / Title
	Info/Display		Info / Angle
	Red/Angle		Red / Netflix / Search
	Green/Slow		Green / APP / Repeat

Original		Replacement	
	Yellow/A-B		Yellow / YouTube / Repeat
	Blue/Repeat		Blue / Prime Video / Random

