







 


 


 


 


 

 






 









 

 





 

 


 
 
 










 














 

 

 



 





 


 










 

 

 

Original	Replacement	Original	Replacement
	Standby/On		Power
	DVD/CD	 + 	Shift + 3
	DVD/CD	 + 	Shift + 2
	Tuner/FM/AM	 + 	Shift + 6
	TV	 + 	Shift + 1
	Line/L1/L2	 + 	Shift + 4
	Display		Display / Media
	Pause		Pause / Step / Freeze
	Open/Close		Eject / Surround
	<</I/<I		<< / Tune-
	Play		Play / Slow
	I >/I >/>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	DVD Menu		D.Menu / Top
	Up/Tune+	 + 	Shift + >> / Tune+
	Up/Tune+		Up
	Return		Back / Return
	Left/ST-		Left
	Enter		OK
	Right/ST+		Right
	Mute		Mute / Dimmer
	Down/Tune-	 + 	Shift + << /
	Down/Tune-		Down
	Sound		Sound / Title
	Volume		Vol+
	Volume Master-		Vol-
	CH+ Tv Control	 + 	Shift + CH+ /
	Power Tv Control	 + 	Shift + Power
	Vol+ Tv Control	 + 	Shift + Vol+
	CH- Tv Control	 + 	Shift + CH- /
	Input Tv Control	 + 	Shift + AV / Input / RDS
	Vol- Tv Control	 + 	Shift + Vol-

Tune+



 




Original	Replacement
 Auto	 Smart / List
 Bass Mode	 Shift + Subtitle / EQ
 Dialogue	 Shift + Audio / Lang I/II
 Surround	 Shift + Eject / Surround
 Virtual SB	 AV / Input / RDS
 Advanced	 Picture / Format
 Program	 TV/Radio /
 Audio	 Audio / Lang I/II
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 Random	 Blue / Prime Video / Random
 Angle	 Info / Angle
 1	 1
 Zoom	 Zoom / Size
 2	 2
 Top Menu	 Shift + D.Menu / Top Menu
 3	 3

Original	Replacement
 Home Menu	 Menu / Home
 4	 4
 System Setup	 Setup / OPT /
 5	 5
 Test Tone	 Text / Goto
 6	 6
 CH Level	 Shift + Smart / List
 7	 7
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 Quiet/Midnight	 Shift + Sleep / Timer
 9	 9
 Timer/Clock	 Sleep / Timer
 CLR	 Exit / Cancel / Clear
 0	 0
 Folder-	 CH- / Page-
 Folder+	 CH+ / Page+





Original	Replacement	Original	Replacement
 Room Setup	 +  Shift + Setup / OPT / Tools		

