



Original	Replacement	Original	Replacement
Power Tv	Power	1	1
Input 1	Shift + 1	2	2
Input 2	Shift + 2	3	3
Input 3	Shift + 3	4	4
Input 4	Shift + 4	5	5
Input 5	Shift + 5	6	6
Input 6	Shift + 6	7	7
Input 7	Shift + 7	8	8
Input 8	Shift + 8	9	9
TV	TV/Radio /	[i+]/Info	Shift + Info / Angle
DTV	D.Menu / Top	0	0
Radio	Shift + TV/Radio / Program	P.Info	Info / Angle
[≡o]	Sleep / Timer	P+	CH+ / Page+
[...]	Subtitle / EQ	CH.Return	Shift + Back / Return
[≡?]	Shift + AV / Input / RDS	Vol+	Vol+
[≡+]	Shift + Stop /	P-	CH- / Page-
[≡]	Text / Goto	Mute	Mute / Dimmer





Original	Replacement
 Vol-	 Vol-
 X/Exit	 Exit / Cancel / Clear
 EPG/DVD Top Menu/Guide	 Guide / EPG / /--
 Down	 Down
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Up	 Up
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Pause/Standby	 Pause / Step / Freeze

Original	Replacement
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 CTRL/HDMI	 Display / Media
 Rec	 Rec / Rec Mode
 Rec Stop	 Shift + Rec / Rec Mode
 Stop	 Stop / Hold
 ·→/CM Skip	 Shift + >> /
 Tools/I-II	 Setup / OPT /
 DVD/Screen	 Zoom / Size
 HDD/AV Selection	 AV / Input / RDS

