 




 

 

 



 





 

 



 
 
 







 









 

 

 



 



 



 

 

 






| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Standby / On |  Power      |  i / Status    |  Info       |
|  Sleep        |  Sleep      |  Speakers      |  List       |
|  Dimmer       |  Blue       |  PHASE         |  Shift + 3D |
|  ECO          |  3D         |  Signal Sel.   |  AV         |
|  BD           |  1          |  Auto / Direct |  TV/R       |
|  GAME         |  2          |  Standard      |  Format     |
|  DVR / BDR    |  3          |  Adv. Surr.    |  Subt       |
|  DVD          |  4          |  Mute          |  Mute       |
|  SAT / CBL    |  5          |  Tools Menu    |  Options    |
|  HDMI         |  6          |  Up            |  Up         |
|  MHL         |  Shift + 6 |  Left         |  Left      |
|  iPod / USB |  7        |  Enter       |  Ok       |
|  CD         |  8        |  Right       |  Right    |
|  ADPTER     |  9        |  Down        |  Down     |
|  TUNER      |  Guide    |  Home Menu   |  Menu     |
|  TV         |  0        |  iPod Ctrl.  |  D. Menu  |
|  NETWORK    |  Pre Ch   |  Return      |  Back     |





| Original   | Replacement  | Original  | Replacement   |
|--|--|---|---|
|  Volume+  |  Vol +          |  Random          |  Text          |
|  Volume-  |  Vol -          |  Disp            |  Shift + Info  |
|  Pause    |  Pause          |  Audio           |  Dual          |
|  BAND     |  Shift + Play   |  SB CH           |  Media         |
|  Play     |  Play           |  CH Level CH Sel |  Smart         |
|  PTY      |  Shift + Stop   |  CH Level-       |  Ch -          |
|  Stop     |  Stop           |  CH Level+       |  Ch +          |
|  +Fav     |  Shift + Pre Ch |  Bass-           |  Shift + Down  |
|  Preset - |  Shift + I<<    |  Bass+           |  Shift + Up    |
|  I<<      |  I<<            |  Treble-         |  Shift + Left  |
|  Preset+  |  Shift + >>I    |  Treble+         |  Shift + Right |
|  >>I    |  >>I          |   |   |
|  Tune-  |  Shift + <<   |   |   |
|  <<     |  <<           |   |   |
|  Tune+  |  Shift + >>   |   |   |
|  >>     |  >>           |   |   |
|  Repeat |  Shift + Text |   |   |

