



 







 























 



 



 













































 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop / Hold
 Open / Close	 Eject / Surround	 Play	 Play / Slow
 Display	 Display / Media	 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II	 Previous	 I<< / Preset-
 Subtitle	 Subtitle / EQ	 Next	 >>I / Preset+
 Angle	 Info / Angle	 REV	 << / Tune-
 Setup	 Setup / OPT /	 FWD	 >> / Tune+
 Menu	 Menu / Home	 Return	 Back / Return
 Top Menu	 D.Menu / Top	 <II Step/Slow	 CH- / Page-
 Multi Dial-	 Down	 Step/Slow II>	 CH+ / Page+
 Multi Dial+	 Up	 Search Mode	 Red / Netflix / Search
 Enter	 OK	 1	 1
 Function	 Fav / Marker / PC	 2	 2
 Video Adjust	 Picture / Format	 3	 3
 FL Dimmer	 Mute / Dimmer	 Clear	 Exit / Cancel / Clear
 Jog Mode 1	 Left	 4	 4
 Jog Mode 2	 Right	 5	 5





	Original	Replacement	Original	Replacement
	6	 6		
	+10	 Guide / EPG / -/--		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Random	 Blue / Prime Video / Random		
	Repeat	 Green / APP / Repeat		
	Repeat A-B	 Yellow / YouTube / Repeat		
	Program	 TV/Radio /		
	Last Memory	 Vol+		
	Condition Memory	 Vol-		

