











 

























Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 BD / DVD	 2
 Game	 4
 CBL / SAT	 0
 STRMBOX	 5
 TV	 1
 Tuner	 6
 NET	 7
 Bluetooth	 9
 Input Select	 AV / Input / RDS
 Repeat /	 Blue / Prime Video / Random
 Repeat /	 Green / APP / Repeat
 Play/Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 AV Adjust	 Setup / OPT /
 Up / Tune+	 >> / Tune+
 Up / Tune+	 Up
 i / Status	 Info / Angle
 Left / Preset-	 Shift + I<< / Preset-
 Left / Preset-	 Left
 Enter	 OK
 Right / Preset+	 Shift + >>I / Preset+
 Right / Preset+	 Right
 Down / Tune-	 Down
 Down / Tune-	 << / Tune-
 Home	 Menu / Home
 Mute	 Mute / Dimmer
 Back	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 Auto / Direct	 Smart / List





Original	Replacement
Surr	Eject / Surround
Stereo	Audio / Lang I/II
Dimmer	+  Shift + Mute / Dimmer
+Fav	Fav / Marker / PC
Mode	Display / Media

Original	Replacement

