



| Original   | Replacement   |
|--|---|
|  Standby        |  Power                       |
|  Source         |  AV / Input / RDS            |
|  Red            |  Red / Netflix / Search      |
|  Green          |  Green / APP / Repeat        |
|  Yellow         |  Yellow / YouTube / Repeat   |
|  Blue           |  Blue / Prime Video / Random |
|  P.Mode         |  Shift + Sleep / Timer       |
|  S.Mode         |  Shift + Audio / Lang I/II   |
|  Freeze         |  TV/Radio /                  |
|  TXT            |  Setup / OPT /               |
|  Mix/FAV List  |  Fav / Marker / PC          |
|  Size         |  Sleep / Timer             |
|  Subtitle     |  Subtitle / EQ             |
|  Cancel/Audio |  Audio / Lang I/II         |
|  Record       |  Rec / Rec Mode            |
|  << / Index   |  >> / Tune+                |
|  >> / Hold    |  I<< / Preset-             |

| Original  | Replacement   |
|---|---|
|  I<< / Reveal    |  << / Tune-            |
|  >>I / Subpage   |  >>I / Preset+         |
|  Menu            |  Menu / Home           |
|  Exit            |  Exit / Cancel / Clear |
|  Up              |  Up                    |
|  Left            |  Left                  |
|  Enter           |  OK                    |
|  Right           |  Right                 |
|  Play            |  Play / Slow           |
|  Pause/Timeshift |  Pause / Step / Freeze |
|  Down           |  Down                 |
|  Stop          |  Stop / Hold         |
|  EPG           |  Guide / EPG / -/-   |
|  Vol+          |  Vol+                |
|  Mute          |  Mute / Dimmer       |
|  CH+           |  CH+ / Page+         |
|  Vol-          |  Vol-                |



