



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		Source		AV
	P.M.		Options		Up		Up
	S.M.	 + 	Shift + Dual		Right		Right
	Zoom		Eject		Down		Down
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Exit / PVR List		Exit
	4		4		Info		Info
	5		5		3D		3D
	6		6		Vol +		Vol +
	7		7		Vol -		Vol -
	8		8		I/II / Nicam		Dual
	9		9		Sleep		Sleep
	0		0		PR +		Ch +
	Return		Back		PR -		Ch -
	CHN. List / Quick		List		Subtitle		Subt





Original	Replacement
 EPG	 Guide
 Fav	 Pre Ch
 Text	 Text
 Rec	 Rec
 Play/Pause / Index	 Play
 Play/Pause / Index	 Shift + Info
 Play/Pause / Index	 Pause
 Stop / Cancel	 Shift + Exit
 Stop / Cancel	 Stop
 Freeze / Hold	 Shift + Pause
 I<< / Size	 Shift + Eject
 I<< / Size	 I<<
 << / Reveal	 Smart
 << / Reveal	 <<
 >> / Mix	 Shift + Text
 >> / Mix	 >>
 >>I / Sub Page	 Shift + Subt

Original	Replacement
 >>I / Sub Page	 >>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

