








 




 

 
 




 


 

 










Original	Replacement
 Standby	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 FAV/Program	 Pre Ch
 Recall/10+	 Back
 P.Mode	 Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Replacement
 Tv/Radio	 TV/R
 Display	 Info
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 EPG	 Guide
 Media	 Media
 CH+	 Ch +
 CH-	 Ch -
 Rec	 Rec





Original	Replacement
T.SHIFT	HOME SMART
AUDIO I/II	SOUND DUAL
ASPECT SIZE	ECO 3D
D.SETUP	SETTINGS OPT
D.MENU	E-MANUAL D.MENU
TITLE	REPEAT TEXT
EJECT	ZOOM
HOLD	PLAY MODE
HOLD	Pause/Hold
REVEAL	Stop
TEXT	<</Text
SUBPAGE	>>/Subpage
INDEX	I<</Index
MIX	>>I/Mix
ZOOM	SHIFT + ZOOM
SUBTITLE	AD SUBT
GOTO	Red

Original	Replacement
A-B	B
ANGLE	C
REPEAT	D

