





































Original	Replacement	Original	Replacement
Power	 Power	Hold / Auto	 Shift + Stop /
Mute	 Mute / Dimmer	Hold / Auto	 D.Menu / Top
1	 1	Red	 Red / Netflix / Search
2	 2	Green	 Green / APP / Repeat
3	 3	Yellow	 Yellow / YouTube / Repeat
4	 4	Blue	 Blue / Prime Video / Random
5	 5	Vol +	 Vol+
6	 6	Vol -	 Vol-
7	 7	I - II	 Audio / Lang I/II
8	 8	Source	 AV / Input / RDS
9	 9	CH +	 CH+ / Page+
0	 0	Freeze	 Shift + Pause / Step /
Text	 Text / Goto	CH -	 CH- / Page-
Recall / S.Page	 Back / Return	Sleep	 Sleep / Timer
Index / PVR List	 Smart / List	Menu	 Menu / Home
Reveal / Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
Zoom / T.Shift	 Zoom / Size	DTV / Radio	 TV/Radio /





 






















 










Original	Replacement	Original	Replacement
Aspect	+ Shift + Picture / Format	>>	>> / Tune+
Up		Slow / FAV	Fav / Marker / PC
Left		A-B / Fav -	+ Shift + Yellow / YouTube /
OK		Repeat / Fav +	+ Shift + Green / APP /
Right		Repeat / Fav +	+ Shift + Up
Down		A-B / Fav -	+ Shift + Down
P.Mode	Picture / Format		
S.Mode	Sound / Title		
Media	Display / Media		
Info	Info / Angle		
Subtitle	Subtitle / EQ		
Play / Pause	Play / Slow		
I<<	I<< / Preset-		
Play / Pause	Pause / Step / Freeze		
>>I	>>I / Preset+		
Stop	Stop / Hold		
<<	<< / Tune-		

Original	Replacement	Original	Replacement
>>	>> / Tune+		
Slow / FAV	Fav / Marker / PC		
A-B / Fav -	+ Shift + Yellow / YouTube /		
Repeat / Fav +	+ Shift + Green / APP /		
Repeat / Fav +	+ Shift + Up		
A-B / Fav -	+ Shift + Down		





Original	Replacement	Replacement
Power		Power
Freeze		Pause / Step / Freeze
Swap		Back / Return
PIP		Eject / Surround
I-II		Audio / Lang I/II
FAV.CH		Fav / Marker / PC
[≡]		Text / Goto
Mute		Mute / Dimmer
Sleep		Sleep / Timer
P.Size		Zoom / Size
1		1
2		2
3		3
4		4
5		5
6		6
7		7

Original	Replacement	Replacement
8		8
9		9
0		0
Vol+		Vol+
Jump		Setup / OPT /
ENT		Smart / List
Vol-		Vol-
Info		Info / Angle
Source		AV / Input / RDS
CH+		CH+ / Page+
Ch-		CH- / Page-
Exit		Exit / Cancel / Clear
Menu		Menu / Home
Up		Up
Left		Left
OK		OK
Right		Right





Original	Replacement	Original	Replacement
Down			
S.Mode			
P.Mode			
Red			
Green			
Yellow			
Blue			
[≡i]			
[≡?]			
[≡↓]			
[≡□]			

