






Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Netflix	 Shift + Red / Netflix /
 Youtube	 Shift + Yellow / YouTube /
 Subtitles	 Subtitle / EQ
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Text	 Text / Goto
 Guide	 Guide / EPG / -/--
 Aspect	 Picture / Format
 Up	 Up
 Left	 Left
 OK	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Menu / Home
 Home	 Shift + Menu /
 Options	 Shift + Setup / OPT / Tools
 Options	 Setup / OPT /
 Vol+	 Vol+
 Vol-	 Vol-
 Google Assist	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Recall		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

