




| Original  | Replacement | Original  | Replacement                 |
|---|-------------|---|-----------------------------|
|    | Power       |    | Power                       |
|    | Tv/Radio    |    | TV/Radio /                  |
|    | Red         |    | Red / Netflix / Search      |
|    | Green       |    | Green / APP / Repeat        |
|    | Yellow      |    | Yellow / YouTube / Repeat   |
|    | Blue        |    | Blue / Prime Video / Random |
|    | Subtitle    |    | Subtitle / EQ               |
|    | Text        |    | Text / Goto                 |
|    | Hold        |    | Shift + Stop /              |
|    | TVG         |    | Guide / EPG / -/--          |
|   | Audio       |   | Audio / Lang I/II           |
|  | Play        |  | Play / Slow                 |
|  | Pause       |  | Pause / Step / Freeze       |
|  | Size        |  | Zoom / Size                 |
|  | <<          |  | << / Tune-                  |
|  | Subpage     |  | Eject / Surround            |
|  | >>          |  | >> / Tune+                  |

| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|    | Rec         |    | Rec / Rec Mode        |
|    | Stop        |    | Stop / Hold           |
|    | I<<         |    | I<< / Preset-         |
|    | FAV         |    | Fav / Marker / PC     |
|    | >>I/Index   |    | >>I / Preset+         |
|    | Menu        |    | Menu / Home           |
|    | Up          |    | Up                    |
|    | Source      |    | AV / Input / RDS      |
|    | Left        |    | Left                  |
|    | OK          |    | OK                    |
|   | Right       |   | Right                 |
|  | Down        |  | Down                  |
|  | Exit        |  | Exit / Cancel / Clear |
|  | Aspect      |  | Picture / Format      |
|  | Vol+        |  | Vol+                  |
|  | Mute        |  | Mute / Dimmer         |
|  | CH+         |  | CH+ / Page+           |



