




















 
 
 









 



 




 




 














Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	-/--		Shift + Guide / EPG / -/--
	4		4
	5		5
	6		6
	PP		Shift + Back / Return
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	Up		Up
	EPG		Guide / EPG / -/--

Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Disp		Display / Media
	Vol+		Vol+
	PC		Shift + Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	AV		AV / Input / RDS
	CH-		CH- / Page-
	Dvb		Shift + 2
	TV		Shift + 1
	Text		Text / Goto
	Mix		Shift + Text /
	i		Info / Angle



