



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto
	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	-/--
0	0
AUTO	AUTO
PROGRAM	PROGRAM
INTRO	INTRO
REPEAT	REPEAT
A-B	A-B
HOLD	HOLD
TITLE	TITLE
NICAM	NICAM

Original	Replacement
ASPECT	ASPECT
D.SUB	D.SUB
GOTO	GOTO
ANGLE	ANGLE
PGUP SLOW	PGUP SLOW
D.DISP	D.DISP
PGDW STE	PGDW STE
CO- STB	CO- STB
VIDEO	VIDEO
TAPE	TAPE
TUNER	TUNER
AUX- HDD	AUX- HDD
USB	USB
BLUETOOTH	BLUETOOTH
HDMI- BAT	HDMI- BAT
PC FAV MARKER	PC FAV MARKER
NETFLIX SEARCH	NETFLIX SEARCH
APP REPEAT	APP REPEAT
YouTube REPEAT A-B	YouTube REPEAT A-B
Prime Video RANDOM	Prime Video RANDOM
SHIFT + HOLD	SHIFT + HOLD
SHIFT + TITLE	SHIFT + TITLE
SHIFT + NICAM	SHIFT + NICAM

