



 







































 





















 





| Original | | Replacement | | Original | | Replacement | |
|---|--------|---|--------------------------|---|---------|---|-----------------------|
|  | Power |  | Power |  | V - |  | Vol- |
|  | Mute |  | Mute / Dimmer |  | Home |  | Shift + Menu / |
|  | 1 |  | 1 |  | CH - |  | CH- / Page- |
|  | 2 |  | 2 |  | Menu |  | Menu / Home |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Source |  | AV / Input / RDS |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | Enter |  | OK |
|  | 7 |  | 7 |  | Right |  | Right |
|  | 8 |  | 8 |  | Exit |  | Exit / Cancel / Clear |
|  | 9 |  | 9 |  | Down |  | Down |
|  | List |  | Smart / List |  | Display |  | Display / Media |
|  | 0 |  | 0 |  | P.Mode |  | Picture / Format |
|  | Recall |  | Back / Return |  | S.Mode |  | Sound / Title |
|  | V + |  | Vol+ |  | Sleep |  | Sleep / Timer |
|  | Aspect |  | Shift + Picture / Format |  | MTS |  | Shift + Smart / List |
|  | CH + |  | CH+ / Page+ |  | Rec |  | Rec / Rec Mode |





| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|-----------------------------|---|----------------|---|-------------------------|
|  | Guide |  | Guide / EPG / -/-- |  | CAP |  | Shift + Display / Media |
|  | Red |  | Red / Netflix / Search |  | Subtitle |  | Subtitle / EQ |
|  | Green |  | Green / APP / Repeat |  | TV / Radio |  | TV/Radio / |
|  | Yellow |  | Yellow / YouTube / Repeat |  | FAV |  | Fav / Marker / PC |
|  | Blue |  | Blue / Prime Video / Random |  | Size / Mouse |  | Zoom / Size |
|  | << / Index |  | << / Tune- |  | Hold / Refresh |  | Stop / Hold |
|  | << / Index |  | Shift + << / | | | | |
|  | Play/Pause / |  | Shift + Play / | | | | |
|  | Play/Pause / |  | Pause / Step / Freeze | | | | |
|  | Play/Pause / |  | Play / Slow | | | | |
|  | >> / TTX |  | >> / Tune+ | | | | |
|  | >> / TTX |  | Shift + >> / | | | | |
|  | I<< / Sub.Pg |  | Shift + I<< / Preset- | | | | |
|  | I<< / Sub.Pg |  | I<< / Preset- | | | | |
|  | >>I / Reveal |  | >>I / Preset+ | | | | |
|  | Stop / Mix |  | Shift + Rec / Rec Mode | | | | |
|  | Stop / Mix |  | Shift + Stop / | | | | |

Hold

