





 



 

 



 






 
 







 








 


 



 
 

 

 






 

 







 



 

 





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Return	 Back
 Picture	 Format
 TV / AV	 AV
 Up	 Up

Original	Replacement
 Up	 Ch +
 Down	 Down
 Down	 Ch -
 Right	 Right
 Right	 Vol +
 Left	 Left
 Left	 Vol -
 Menu	 Menu
 Menu	 Ok
 Sound	 Dual
 Display	 Info
 Nicam / A2	 Options
 Cancel	 Exit
 Size	 3D
 Text / Mix	 Text
 Hold	 Pause
 Reveal	 D. Menu





	Original	Replacement	Original	Replacement
	Subpage	 Subt		
	Index	 List		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Cyan	 Blue		

