




















Original	Replacement
	Smart / List
	Text / Goto
	Display / Media
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Back / Return
	Fav / Marker / PC

Original	Replacement
	Subtitle / EQ
	Info / Angle
	Picture / Format
	Vol+
	Shift + CH+ /
	CH+ / Page+
	Vol-
	Shift + CH- /
	CH- / Page-
	Audio / Lang I/II
	Shift + Audio / Lang I/II
	Sound / Title
	Guide / EPG / -/-
	Up
	Left
	OK
	Right





Original		Replacement		Original		Replacement	
	Menu		Menu / Home				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Timer		Sleep / Timer				
	Aspect		Zoom / Size				

