 


 





 



 



 





 



 
 
 

 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Replacement
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right









 
















 

 


 

 
Original		Replacement	
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	EPG		Guide
	Info		Info
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Format
	Reveal		3D
	Subtitle		Subt
	Subpage		AV
	FAV+		Shift + Ch +

Original		Replacement	
	FAV-		Shift + Ch -



 




 



 



Original	Replacement	Original	Replacement
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Replacement	Original	Replacement
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Replacement	Original	Replacement
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

