 




 

 





 









 




 
 

 








Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Replacement
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right









 















 





 
 
 


Original	Replacement
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Size	 Format
 Reveal	 3D
 Subtitle	 Subt
 Subpage	 AV
 FAV+	 Shift + Ch +

Original	Replacement
 FAV-	 Shift + Ch -



 




 
 


 



Original	Replacement	Replacement
Power		Power
Mute		Mute
[ I ]/Menu		Menu
Exit		Exit
Source		AV
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Subtitle		Subt
Text		Text

Original	Replacement	Replacement
Vol+		Vol +
Vol-		Vol -
CH+		Ch +
CH-		Ch -
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Recall		Back
Info		Info
EPG		Guide
Freeze		Options
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Original	Replacement	Original	Replacement
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

