



Original	Replacement	Original	Replacement
Standby	Power	Audio	Dual
Mute	Mute	Subtitle	Subt
1	1	CH.List	List
2	2	FAV	Pre Ch
3	3	Up	Up
4	4	Down	Down
5	5	Right	Right
6	6	Left	Left
7	7	Ok	Ok
8	8	Vol+	Vol +
9	9	Vol-	Vol -
0	0	Exit/Cancel	Exit
Display	Info	S.Mode	Shift + Dual
Recall	Back	P.Mode	Format
Setup	Menu	CH+/Page+	Ch +
EPG	Guide	CH-/Page-	Ch -
Source	AV	Red/Goto	Red





Original	Replacement
A-B Green/A-B	B Green
REPEAT Yellow/Repeat	C Yellow
ANGLE Blue/Angle	D Blue
Record Record	REC MODE Rec
Rec.List Rec. List	HOME SMART Smart
TV/Radio TV/Radio	SEARCH TV/R TV/R
Scaler Scaler	ECO 3D 3D
Play Play	PLAY MODE Play
Pause/Reveal Pause/Reveal	Pause Pause
Stop/Index Stop/Index	Stop Stop
I<< Mix I<< Mix	I<< I<<
<</Mix <</Mix	<< <<
>>I >>I	>>I >>I
>> >>	>> >>
Text Text	REPEAT TEXT Text
DVD-Menu S. Page / S. Page /	E-MANUAL D.MENU D. Menu
Hold/Title Hold/Title	APP MEDIA Media

Original	Replacement
Zoom+ Size Zoom+/Size	SHIFT + CH Shift + Ch +
Zoom- Zoom-	SHIFT + CH Shift + Ch -
Eject Eject	ZOOM Eject
Sleep Sleep	PROG SLEEP Sleep

