


 

















 

 

 

 

 





 













 









 

 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		Smart Hub		VOD
	Source		SRC		Vol+		VOL +
	HDMI		MEDIA		Vol-		VOL -
	1		1		P+		CH +
	2		2		P-		CH -
	3		3		Guide		-/-- / EPG
	4		4		Menu		MENU
	5		5		Tools		OPT+
	6		6		Info		INFO
	7		7		Up		UP
	8		8		Enter		OK
	9		9		Down		DOWN
	0		0		Right		RIGHT
	TTX/MIX		TEXT		Left		LEFT
	PRE-CH		P/C / FAV		Return		BACK
	Mute		MUTE		Exit		EXIT
	CH List		TV/R		Red		Red (A)





Original		Replacement	
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	Search		Audio
	P.Size		V-FOR
	Status		WIDE
	AD/Subt.		Subt.
	E-Manual		Shift + EPG
	History		Shift + P/C / FAV
	<</ <<		Rewind
	Pause		Pause
	>> >>		Fast Forward
	Rec		Rec
	Play		Play
	Stop		Stop

Original		Replacement	

