


 

















 

 

 

 

 





 













 









 

 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		Smart Hub		VOD
	Source		SRC		Vol+		VOL +
	HDMI		MEDIA		Vol-		VOL -
	1		1		P+		CH +
	2		2		P-		CH -
	3		3		Guide		-/-- / EPG
	4		4		Menu		MENU
	5		5		Tools		OPT+
	6		6		Info		INFO
	7		7		Up		UP
	8		8		Enter		OK
	9		9		Down		DOWN
	0		0		Right		RIGHT
	TTX/MIX		TEXT		Left		LEFT
	PRE-CH		P/C / FAV		Return		BACK
	Mute		MUTE		Exit		EXIT
	CH List		TV/R		Red		Red (A)





Original	Replacement	Original	Replacement
Green	Green (B)		
Yellow	Yellow (C)		
Blue	Blue (D)		
Search	Audio		
P.Size	V-FOR		
Status	WIDE		
AD/Subt.	Subt.		
E-Manual	Shift + EPG 1 -/- / EPG		
History	Shift + P/C / FAV		
<< <<	Rewind		
Pause	Pause		
>> >>	Fast Forward		
Rec	Rec		
Play	Play		
Stop	Stop		

