 

 

 
 

 

 
 


 

 

 



 
 
 


 



 
 



 











 
 
 




 
 

 

 

 
 
 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	Subt.		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	TTX/MIX		Text
	HDMI		Smart
	DTV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.List		List
	Menu		Menu
	Media.P		Media
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





Original	Replacement	Original	Replacement
 Return	 Back	 Pause	 Pause
 Exit	 Exit	 >>	 >>
 Red/A	 Red		
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 PIP	 3D		
 PIP Down	 I<<		
 PIP Up	 >>I		
 P.Mode	 Shift + Format		
 SRS	 Dual		
 P.Size	 Format		
 Still	 D. Menu		
 Rec	 Rec		
 Stop	 Stop		
 <<	 <<		
 Play	 Play		

