





Original	Replacement
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Subtitle / EQ
	Zoom / Size
	D.Menu / Top
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up

Original	Replacement
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4





Original	Replacement
<b>5</b>	5
<b>6</b>	6
<b>7</b>	7
<b>8</b>	8
<b>9</b>	9
<b>GUIDE</b>	Guide
<b>0</b>	0
<b>A</b>	Red/A
<b>B</b>	Green/B
<b>C</b>	Yellow/C
<b>D</b>	Blue/D
<b>RETURN</b>	Return

Original	Replacement

