 
 

 

 

 


 

 
 
 
 




 
 
 
 






 


 
 
 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Tools		Options
	Return		Back
	Info		Info
	Exit		Exit
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	HDMI		Smart
	TTX/MIX		Text
	P.Size		Format
	P.Mode		Shift + Format





Original	Replacement	Original	Replacement
E.Mode	Dual		
DMA	Subt		
CH List	List		
SRS	Shift + Dual		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Rec	Rec		
Pause	Pause		
<<	<<		
>>	>>		
Play	Play		
Stop	Stop		

