










 

 



 









 









 



 












 




 




 


 




 

 



 



 

 

 

 



 







Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red




 



 





 





 

 
 
 

 

 



 
 
 



	Original	Replacement	Original	Replacement
	Input Sel			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Prog+			
	Prog-			
	Standby/On TV			
	Mute Tv			
	Tv Vol+			
	Tv Vol-			





Original	Replacement
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/DVD	 TV/R
 Open/Close	 Eject
 DTV/Analog	 Smart
 Input Sel	 AV
 Copy	 Options
 Pause	 Pause

Original	Replacement
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 <<	 <<
 >>	 >>
 Prog+	 Ch +
 Prog-	 Ch -
 Menu	 Menu
 Return	 Back
 Exit	 Exit
 Title List/Disc Menu	 Media
 Play List/Title Menu	 Shift + Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue



