










 

 



 









 









 



 












 




 




 


 




Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red

















 

 

 


 


 

 



Original	Replacement
Green	Green
Yellow	Yellow
Blue	Blue
Guide	Guide
Info	Info
Subtitle	Subt
Text	Text
Tv/Radio	Sleep
FAV List	Pre Ch
Marker	Shift + Options
Rec	Rec
Audio	Dual
Rec Mode	Shift + Rec
Rec	Format
Repeat	Shift + Text
OK	Ok
Up	Up

Original	Replacement
Down	Down
Right	Right
Left	Left
USB	Shift + Media
Timer	Shift + AV
HDD	Shift + Smart












 

 



 



















 



 

 










 
 







 


 





	Original	Replacement	Original	Replacement
	Input Sel			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Prog+			
	Prog-			
	Standby/On TV			
	Mute Tv			
	Tv Vol+			
	Tv Vol-			

 
 




 

 
 
 
 







 
 





 




 







Original	Replacement	Original	Replacement
 Standby/On	 Power	  <<	  <<
 1	 1	 >>	 >>
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue





Original		Replacement		Original		Replacement	
	Guide		Guide		USB		Shift + Media
	Info		Info		Timer		Shift + AV
	Subtitle		Subt		HDD		Shift + Smart
	Text		Text				
	Tv/Radio		D. Menu				
	FAV List		Pre Ch				
	Marker		Shift + Options				
	Rec		Rec				
	Audio		Dual				
	Rec Mode		Shift + Rec				
	Rec		Format				
	Repeat		Shift + Text				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

