 



 
 
 
 
 
 
 
 

 
 
















	Original	Replacement		Original	Replacement
	Power		Power		P+
	Source		AV		P-
	1		1		CH.List
	2		2		Smart Hub
	3		3		Menu
	4		4		Guide
	5		5		Tools
	6		6		Info
	7		7		Return
	8		8		Exit
	9		9		Up
	0		0		Down
	TTX/MIX		Text		Right
	PRE-CH		Pre Ch		Left
	Vol+		Vol +		Ok
	Vol-		Vol -		Red
	Mute		Mute		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Social Tv	 Media		
 Search	 TV/R		
 3D	 3D		
 E-Manual	 D. Menu		
 P.Size	 Format		
 AD/Subt.	 Subt		
 <</ <<	 <<		
 Pause	 Pause		
 > >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

