
 



 



 





 

 
 

 


 










 
 


 
 






Original		Replacement		Original		Replacement	
	Power		Power		Source		AV
	TV / DTV		TV/R		P +		Ch +
	1		1		P -		Ch -
	2		2		Guide		Guide
	3		3		Menu		Menu
	4		4		W.Link		Smart
	5		5		Tools		Options
	6		6		Return		Back
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	-/--		Shift + Guide		OK		Ok
	Pre-CH		Pre Ch		Info		Info
	Vol +		Vol +		Exit		Exit
	Vol -		Vol -		Red		Red
	Mute		Mute		Green		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 TTX / Mix	 Text		
 P.Size	 Format		
 DMA	 3D		
 E.Mode	 Dual		
 CH.List	 List		
 Subt.	 Subt		
 <<	 <<		
 I<<	 I<<		
 Pause	 Pause		
 >>	 >>		
 >>I	 >>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

