



Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		CH List		List
	2		2		Smart Hub		Smart
	3		3		Menu		Menu
	4		4		Search		TV/R
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Vol+		Vol +		Enter		Ok
	Vol-		Vol -		Red		Red
	Mute		Mute		Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Social TV		Media		
	HDMI		Subt		
	3D		3D		
	E-Manual		D. Menu		
	P.Size		Format		
	SRS		Dual		
	<<		<<		
	I<<		I<<		
	Pause		Pause		
	>>		>>		
	>>I		>>I		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

