



| Original | Replacement |
|----------------|------------------|
| Standby | Power |
| Off | Shift + Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| _/---/Del | GUIDE Guide |
| Mute | Mute |
| Vol+ | Vol + |
| Vol- | Vol - |
| Content (Home) | HOME SMART Smart |

| Original | Replacement |
|-------------------|---------------|
| Source | AV |
| CH+ | Ch + |
| CH- | Ch - |
| Magicinfo/Lite /S | MEDIA Media |
| Menu | Menu |
| Blank | PRE-CH Pre Ch |
| Tools | OPT Options |
| Info | INFO Info |
| Return | BACK Back |
| Exit | EXIT Exit |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| Enter | OK Ok |
| Red/PC | Red |
| Green/DVI | Green |





| Original | | Replacement | | Original | Replacement |
|----------|-------------|-------------|--------|----------|-------------|
| | Yellow/HDMI | | Yellow | | |
| | Blue/DP | | Blue | | |
| | Magicinfo | | TV/R | | |
| | 3D | | 3D | | |
| | Lock | | Eject | | |
| | Stop | | Stop | | |
| | <</ << | | << | | |
| | Play | | Play | | |
| | Pause | | Pause | | |
| | >>/>> | | >> | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

