


 


 

 





| Original | | Replacement | | Original | | Replacement | |
|---|------------|---|-------|---|------------|---|---------|
|  | Power |  | Power |  | >>I |  | >>I |
|  | Source |  | AV |  | << |  | << |
|  | Open/Close |  | Eject |  | >> |  | >> |
|  | Sleep |  | Sleep |  | Stop |  | Stop |
|  | 1 |  | 1 |  | Play |  | Play |
|  | 2 |  | 2 |  | Pause |  | Pause |
|  | 3 |  | 3 |  | Vol+ |  | Vol + |
|  | 4 |  | 4 |  | Vol- |  | Vol - |
|  | 5 |  | 5 |  | Mute |  | Mute |
|  | 6 |  | 6 |  | Repeat |  | Text |
|  | 7 |  | 7 |  | Tuning+ |  | Ch + |
|  | 8 |  | 8 |  | Tuning- |  | Ch - |
|  | 9 |  | 9 |  | Disc Menu |  | D. Menu |
|  | 0 |  | 0 |  | Menu |  | Menu |
|  | Dolby PL |  | Dual |  | Title Menu |  | TV/R |
|  | DSP/EQ |  | Guide |  | Tools |  | Options |
|  | I<< |  | I<< |  | Info |  | Info |

 



 

 
 
 


 
 








 


 



 







 

 


 
 
 

 

 
 
 

 
 
 
 

 
 


 

 
 


| Original | | Replacement | | Original | Replacement |
|---|----------------------|---|--------|----------|-------------|
|  | Return |  | Back | | |
|  | Exit |  | Exit | | |
|  | Up |  | Up | | |
|  | Down |  | Down | | |
|  | Right |  | Right | | |
|  | Left |  | Left | | |
|  | Enter |  | Ok | | |
|  | Red |  | Red | | |
|  | Green/Tuner |  | Green | | |
|  | Yellow/MO/ST |  | Yellow | | |
|  | Blue/CD Ripping |  | Blue | | |
|  | Dimmer |  | Subt | | |
|  | S.Vol |  | Format | | |
|  | P.Bass/Audio Upscale |  | 3D | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |





| Original | Replacement |
|---|--|
|  Power |  Power |
|  Function Tv |  AV |
|  Sleep |  Sleep |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  << |  << |
|  >> |  >> |
|  Stop |  Stop |
|  Play |  Play |

| Original | Replacement |
|---|---|
|  Pause |  Pause |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Menu |  Menu |
|  Tools |  Options |
|  Info |  Info |
|  Return |  Back |
|  Exit |  Exit |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Red |  Red |



