


 










 
 
 
 
 
 
 





 




 



 




 
 
 
 


 

 
 





 


 



 
 




 
 
 







Original	Replacement	Original	Replacement
 Power	 Power	 CH List	 List
 Source	 AV	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Settings	 Options
 3	 3	 Home	 Smart
 4	 4	 Guide	 Guide
 5	 5	 E-Manual	 D. Menu
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 Enter	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Pic Size		3D				
	AD/Subt.		Subt				
	Picture		Format				
	<</ <<		<<				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	>>/>>		>>				

