





 



 















 



 

 

 











 





 
 
 
 


 
 



 



 






 

 
 
 

 







 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 TV	 TV/Radio /	 Source	 AV / Input / RDS
 1	 1	 P -	 CH- / Page-
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 FAV CH	 Fav / Marker / PC	 Right	 Right
 0	 0	 Internet	 Smart / List
 PRE CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 P +	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TTX/MIX Text / Goto
	 Media P Display / Media
	 Content D.Menu / Top
	 CH LIST Shift + Smart / List
	 AD Audio / Lang I/II
	 SUBT. Subtitle / EQ
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold

Original	Replacement

