






 











 

 





 

























 








Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 PRE-CH	 Pre Ch
 TV	 TV/R
 CH.MGR	 Smart
 Wiselink	 Media

Original	Replacement
 Stop	 Stop
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P-	 Ch -
 P+	 Ch +
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok










 



 
 
 



 













 

 

 
















Original	Replacement
 [=?]/Info	 Info
 [=+]/PIP	 3D
 TTX/MIX	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 I-II/Dual	 Dual
 (O)/SRS	 Back
 Source (Green)	 Shift + AV
 PC	 List
 [▼]/STTL	 Subt
 [<>]/Size	 Format
 [=◆]/P.Mode	 Shift + Format
 [=]/S.Mode	 Options
 Sleep	 Sleep
 Power Cable	 Shift + Power

Original	Replacement
 1 Cable	 Shift + 1
 2 Cable	 Shift + 2
 3 Cable	 Shift + 3
 4 Cable	 Shift + 4
 5 Cable	 Shift + 5
 6 Cable	 Shift + 6
 7 Cable	 Shift + 7
 8 Cable	 Shift + 8
 9 Cable	 Shift + 9
 0 Cable	 Shift + 0
 P+ Cable	 Shift + Ch +
 P- Cable	 Shift + Ch -










 










 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Enter	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 [≡?]/Info	 Info
 8	 8		
 9	 9		
 0	 0		
 TV	 TV/R		
 <<	 <<		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Pre Ch
 TV	 TV/R
 Sleep	 Sleep
 P+	 Ch +
 P-	 Ch -
 <<	 <<

Original	Replacement
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 >>	 >>
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 [≡?]/Info	 Info
 [<>]/Size	 Format
 Source	 AV





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV/R
<<	<<
Stop	Stop
Play	Play
Pause	Pause
>>	>>

Original	Replacement
P+	Ch +
P-	Ch -
Up	Up
Enter	Ok
Down	Down
Right	Right
Left	Left
Menu	Menu
Exit	Exit
[=]/Info	Info

