






 
 
 

 







 

 

 


Original	Replacement	Original	Replacement
Power	Power	Vol-	Vol -
Open/Close	Eject	I<<	I<<
Function	Guide	>>I	>>I
[I]/PLII/S.Vol	Dual	<<	<<
Mute	Mute	>>	>>
DSP/EQ	TV/R	Stop	Stop
1	1	Play	Play
2	2	Pause	Pause
3	3	Disc Menu	D. Menu
4	4	Home	Smart
5	5	Title Menu	Menu
6	6	Tools	Options
7	7	Info	Info
8	8	Return	Back
9	9	Exit	Exit
0	0	Up/Tuning Up	Up
Vol+	Vol +	Down/Tuning	Down



Down



Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Red/Audio Upscale/P. Bass	 Red		
 Green/S/W/Leve	 Green		
 Yellow/Giga	 Yellow		
 Blue/MO/ST	 Blue		
 USB Rec	 Rec		
 Dimmer	 3D		
 Repeat	 Text		
 Tuner Memory	 Subt		

