



 

 

 



 









 









| Original | Replacement | Original | Replacement |
|---|--|--|---|
|  Power |  Power |  Stop |  Stop / Hold |
|  TV Source |  AV / Input / RDS |  Play |  Play / Slow |
|  Sleep |  Sleep / Timer |  Pause |  Pause / Step / Freeze |
|  1 |  1 |  Vol+ |  Vol+ |
|  2 |  2 |  Mute |  Mute / Dimmer |
|  3 |  3 |  CH+ |  CH+ / Page+ |
|  4 |  4 |  Vol- |  Vol- |
|  5 |  5 |  CH- |  CH- / Page- |
|  6 |  6 |  Menu |  Menu / Home |
|  7 |  7 |  Tools |  Setup / OPT / |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  Info |  Info / Angle |
|  0 |  0 |  Left |  Left |
|  I<< |  I<< / Preset- |  Enter |  OK |
|  >>I |  >>I / Preset+ |  Right |  Right |
|  << |  << / Tune- |  Return |  Back / Return |
|  >> |  >> / Tune+ |  Down |  Down |



