



Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>  / Preset+
 Function / TV Source	 AV / Input / RDS	 <<	 << / Tune-
 Open / Close	 Eject / Surround	 >>	 >> / Tune+
 Sleep	 Sleep / Timer	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Vol+	 Vol+
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 Tuning/CH+	 CH+ / Page+
 6	 6	 Tuning/CH+	 Shift + >> /
 7	 7	 Vol-	 Vol-
 8	 8	 Repeat	 Shift + Green / APP /
 9	 9	 Tuning/CH-	 CH- / Page-
 V-Sound	 Shift + Sound / Title	 Tuning/CH-	 Shift + << /
 0	 0	 Disc Menu	 D.Menu / Top
 DSP/EQ	 Subtitle / EQ	 Menu	 Menu / Home
 I<<	 I<< / Preset-	 Title Menu	 Sound / Title





Original	Replacement
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Dimmer	Shift + Mute / Dimmer
GIGA	Display / Media
S.Vol	Picture / Format
Audio Upscale / P.Bass	Audio / Lang I/II

Original	Replacement
S/W Level	Zoom / Size
Tuner Memory	Smart / List
Mo/St	Shift + Audio / Lang I/II
USB Rec	Rec / Rec Mode

