



Original	Replacement
Power	Power
Timer On/Off	Sleep / Timer
Mute	Mute / Dimmer
Sound Mode	Sound / Title
Disc Skip	Picture / Format
Program/Set	Menu / Home
Aux	AV / Input / RDS
Deck 1/2	TV/Radio /
CD/Repeat	3
Mono/St	Fav / Marker / PC
Tuner/Band	6
<< Tape	<< / Tune-
>> Tape	>> / Tune+
Stop Tape	Shift + Stop /
<> Tape	5
Stop CD	Stop / Hold
Play/Pause CD	Play / Slow

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Up/CD >>I	Up
Down/CDI <<	Down
Tuning Mode	OK

