



Original	Replacement	Original	Replacement
	Power		FAV.CH
	Tv/DVD		Fav / Marker / PC
	1		Smart / List
	Repeat		Vol+
	2		Vol-
	EZ View		Mute / Dimmer
	Zoom		Source
	3		AV / Input / RDS
	3		CH+ / Page+
	4		CH- / Page-
	Audio		Info / Angle
	5		Menu / Home
	6		D.Menu / Top
	Angle		Guide / EPG / -/--
	7		Setup / OPT /
	8		Back / Return
	9		Back / Return
	0		CH List
	0		Shift + Smart / List
	0		Exit / Cancel / Clear
	0		Exit / Cancel / Clear
	0		Up
	0		Up



