

 

 



 

 

 

 





 

 











 












 

 

 





 

 

 
 
 















 

 

 
 








Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Caption	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -	 Eject / Surround
 0	 0
 PRE-CH	 Fav / Marker / PC
 Auto Prog.	 TV/Radio /
 FAV.CH	 Shift + Fav / Marker / PC

Original	Replacement
 ADD/Del	 D.Menu / Top
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Menu	 Menu / Home
 MTS	 Display / Media
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Replacement
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 PIP	 Text / Goto
 PIP CH-	 I<< / Preset-
 PIP CH+	 >>I / Preset+
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 P.Size	 Zoom / Size
 Still	 Shift + Pause / Step / Step /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 >>	 >> / Tune+

