





































| Original | Replacement |
|---|---|
|  Power Tv |  Power |
|  Power STB |  Shift + Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TTX/MIX |  Text / Goto |
|  0 |  0 |
|  PRE-CH |  Fav / Marker / PC |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |

| Original | Replacement |
|---|--|
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  CH List |  Shift + Smart / List |
|  P- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Smart Hub |  Smart / List |
|  Guide |  Guide / EPG / -/- |
|  Tools |  Setup / OPT / |
|  Up |  Up |
|  Info |  Info / Angle |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Return/Back |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red |  Red / Netflix / Search |





| Original | Replacement | Original | Replacement |
|----------|-----------------------------|----------|-------------|
| | Green / APP / Repeat | | |
| | Yellow / YouTube / Repeat | | |
| | Blue / Prime Video / Random | | |
| | Display / Media | | |
| SEARCH | Shift + Red / Netflix / | | |
| KEYPAD | Picture / Format | | |
| E-MANUAL | D.Menu / Top | | |
| D | Audio / Lang I/II | | |
| AD/SUBT. | Subtitle / EQ | | |
| << | << / Tune- | | |
| Pause | Pause / Step / Freeze | | |
| >> | >> / Tune+ | | |
| Rec | Rec / Rec Mode | | |
| Play | Play / Slow | | |
| Stop | Stop / Hold | | |
| | | | |
| | | | |

