 


 
 








 

 
 
 



 
 




 



 




 

 

 










 




 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 3	 3
 TV	 TV/R	 4	 4
 →←	 Smart	 5	 5
 Mute	 Mute	 6	 6
 [ . ]/[▼]	 Subt	 7	 7
 F	 Menu	 8	 8
 O/Timer	 Info	 9	 9
 Up	 Up	 0	 0
 Down	 Down	 -/--	 Guide
 Right	 Right	 P-P	 Pre Ch
 Left	 Left	 Stop	 Stop
 P+	 Ch +	 <<	 <<
 P-	 Ch -	 Play	 Play
 Vol+	 Vol +	 >>	 >>
 Vol-	 Vol -		
 1	 1		
 2	 2		

