

















































Original	Replacement	Original	Replacement
 Power	 Power	 F[...]	 Menu / Home
 1	 1	 Vol-	 Vol-
 2	 2	 Vol+	 Vol+
 3	 3	 Mute	 Mute / Dimmer
 4	 4	 →←←	 Display / Media
 5	 5	 0	 Info / Angle
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 -/--	 -/-- Guide / EPG / -/--		
 [.] [▼]	 Smart / List		
 TV / +	 AV / Input / RDS		
 P↔P	 Fav / Marker / PC		
 P+	 CH+ / Page+		
 P-	 CH- / Page-		

