





 


 
 

 
 

 












 


 












 

 









 
 









 



 

 






| | Original | Replacement | | Original | Replacement |
|---|----------|---|---------------|---|-------------|
|  | Standby |  | Power |  | Freeze |
|  | Info |  | Info |  | TV/Radio |
|  | Mute |  | Mute |  | FAV |
|  | P.Mode |  | Format |  | Source |
|  | S.Mode |  | Dual |  | Recall |
|  | Zoom |  | Shift + Eject |  | CH List |
|  | Sleep |  | Sleep |  | Up |
|  | 1 |  | 1 |  | Left |
|  | 2 |  | 2 |  | Ok |
|  | 3 |  | 3 |  | Right |
|  | 4 |  | 4 |  | Down |
|  | 5 |  | 5 |  | Vol + |
|  | 6 |  | 6 |  | Vol - |
|  | 7 |  | 7 |  | Ch + |
|  | 8 |  | 8 |  | Ch - |
|  | 9 |  | 9 |  | LCD Menu |
|  | 0 |  | 0 |  | EPG / DVD |
| | | | |  | Pause |
| | | | |  | TV/R |
| | | | |  | Pre Ch |
| | | | |  | AV |
| | | | |  | Back |
| | | | |  | List |
| | | | |  | Up |
| | | | |  | Left |
| | | | |  | Ok |
| | | | |  | Right |
| | | | |  | Down |
| | | | |  | Vol + |
| | | | |  | Vol - |
| | | | |  | Ch + |
| | | | |  | Ch - |
| | | | |  | Menu |
| | | | |  | Guide |





| Original | Replacement |
|---|--|
|  EPG / DVD |  D. Menu |
|  Audio |  Shift + Dual |
|  Exit / DVD Setup |  Exit |
|  Exit / DVD Setup |  Options |
|  TXT |  Text |
|  Index / Angle |  Smart |
|  Size |  3D |
|  Subtitle |  Subt |
|  Mix / Open/Close |  Shift + Text |
|  Mix / Open/Close |  Eject |
|  Play/Pause / |  Play |
|  Stop / Hold |  Stop |
|  A-B / Subpage |  Media |
|  << / Red |  Red |
|  << / Red |  << |
|  >> / Green |  >> |
|  >> / Green |  Green |

| Original | Replacement |
|--|--|
|  I<< / Yellow |  I<< |
|  I<< / Yellow |  Yellow |
|  >>I / Blue |  >>I |
|  >>I / Blue |  Blue |

